

andrew James

T Teppanyaki Griddle & Grill



This manual is applicable to the following models:

Ceramic Teppanyaki griddle and grill

T Teppanyaki Griddle and Grill

Please read the manual fully before using the appliance and keep the manual safe for future reference.

Contents Page

Safety instructions	Page 3
Appliance specific safety instructions	Page 4
Before first time use	Page 4
Initial operation	Page 4
Using the unit	Page 5
Half grill/ griddle surface	Page 5
Cleaning	Page 6
UK and EU Guarantee	Page 7
Electrical information	Page 8
Disposal of the appliance	Page 8

Safety instructions

When using any electrical appliance, basic safety precautions should always be followed including:

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years old.
- Always ensure the voltage on the rating label corresponds to the voltage in your home.
- Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by a qualified electrician or a service repair centre. If in doubt please contact our customer service team.
- The appliance is intended for domestic use only. Industrial or commercial use will void the warranty. The supplier cannot be held responsible for injury or damage if the appliance has been used for anything other than its intended use.
- Incorrect operation and use can damage the appliance and cause injury to the user.
- Do not use the appliance if it has been dropped or damaged in any way. If the unit has been damaged take the unit for examination and or repair by an authorised service agent.
- Do not immerse or expose the motor assembly, plug or the power cord in water or any other liquid for any reason.
- If the supply cord is damaged it must be replaced by the manufacturer or by someone who is suitably qualified to avoid a potential hazard.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled or tripped over accidentally.
- Do not allow the cord to touch hot surfaces and do not place the cord near hot gas, electric burners or in a heated oven.
- Use of an extension cord with this appliance is not recommended. However if it is necessary to use an extension cord, ensure that the extension cord is equal to or greater than the power consumption of the appliance to avoid overheating of the appliance and extension cord. Do not use any other appliance on the extension cord. Do not place the extension cord in a position where it can be pulled on by children or animals or be tripped over.
- Always operate the appliance on a smooth, even and stable surface. Do not place the unit on a hot surface.
- Always remove the plug of the appliance safely. Do not pull on the appliances cord to remove the appliance plug from the electrical socket.

- Never handle or operate the appliance with wet hands.

Appliance specific safety instructions

- It is not recommended to use the appliance outside.
- Do not leave the appliance unattended when it is plugged in.
- Always use the appliance on a stable and flat surface.
- Make sure the cord never comes into contact with hot parts of the appliance.
- Only use the thermostat supplied with the appliance.
- Before inserting or removing the thermostat please make sure that the temperature sensor control is turned off. Otherwise the appliance may fail to operate and overheat.
- When inserting the thermostat please make sure that it is inserted correctly with the regulator facing upwards.
- Do not use excessive force or bend the thermostat when inserting or removing it from the appliance.
- Always keep the unit at a safe distance of at least 30cm from flammable objects such as furniture, curtains etc. when it is in use.

Before first time use

- Remove all packaging.
- We recommend that you clean the device as described under “cleaning”.

Initial operation

- Place the device on a heat-resistant surface.
- Ensure that the thermostat is correctly inserted into the grill. Improper installation of the thermostat may lead to abnormal heating which could cause damage to the product and injury to persons.
- The control knob range is from 1-5 (1 being the coolest setting).

Using the unit

Please note!

- Pre-heat the grill for approximately 5 minutes before use.
 - The cooking time depends on the type of food you are cooking, the degree you want it cooked (e.g. steak medium rare) and the quality of the ingredients.
1. Wipe the grill and griddle clean using a damp cloth.
 2. Plug the thermostat connector into the body of the appliance, and then plug the power cord into the socket and switch the appliance on.
 3. Turn on the thermostat light and preheat the appliance until the light is off.
 4. Place the ingredients you wish to cook onto the appropriate surface i.e. meat is generally best cooked on the griddle while eggs are best cooked on the grill face.
 5. Adjust the temperature accordingly throughout the cooking process.

After use, unplug the grill from the wall outlet. Allow a cooling period to occur, wipe the interior of the appliance with a damp cloth, and make sure the machine body is clean.

Ceramic surface grill

Please note: Do not cut food on the ceramic surface of the appliance as it will damage the ceramic qualities of the cooling surface. Use soft utensils on the surface of the appliance only.

Half grill/ griddle surfaces

Here are a few tips to help you fully utilize the different surfaces of your new grill.

- The griddles jagged surface makes it ideal for cooking meat such a chicken and beef steaks.
- It is best to cook vegetables and eggs on the grills surface.
- It is recommended when cooking eggs on the grill to use a little oil to prevent it from sticking to its surface.

Cleaning

- Always remove the plug from the mains socket before cleaning the unit.
- Always allow a cooling period to occur before cleaning the appliance.
- Do not use any wire brushes, sharp objects or abrasive cleaning utensils as this could damage the surface of the griddle and grill.
- Under no circumstances should the device be immersed in water or any other liquid.

Grill & Griddle

- It is advised to remove any food residues while they are still warm with a damp cloth or paper towel.
- Always clean the heating surface of the grill with a soft sponge and soapy water, then wipe off any excess with clean water and dry thoroughly with a soft cloth.
- After drying the surface of the grill, we recommend that you apply a small amount of cooking oil to the surface of the grill.
- Clean the housing after use with a slightly damp cloth.

Thermostat

- Please clean the thermostat with a soft paper towel or a soft dry cloth.
- Never clean the regulator with any wet items such as a wet cloth as it could result in an electric shock or fire.
- Never immerse the cable of the appliance in water or any other liquid.

UK and EU Guarantee

Your new Andrew James product comes with a 24 month guarantee and a 2 year fixed warranty, effective from receipt confirmation. Your receipt or order number is required as proof of purchase date so it is imperative that you keep it safe. This guarantee only applies if the item has been used solely for the use intended, and all instructions have been followed accordingly. Please note this product is only for domestic not commercial use.

Abuse of your product will invalidate the guarantee. Returned goods can only be accepted if repackaged properly within the original colour product box, and presented with the original receipt of sale/order number. This does not affect your statutory rights.

Returned products must be cleaned and returned to us in as close to delivery condition as possible.

If your product develops a problem within the first 12 months of the fixed warranty, we will pay all shipping costs to have it returned to us. After 12 months the customer will be liable for the cost of returning the product to us. We will then pay to have the repaired/replaced item shipped back to the customer.

If you wish to return your item for a full refund, you have the right to do so within the first 7 days, however we will deduct the cost of shipping from the value of the refund.

Customers are responsible for any taxes applied to our products when they are shipped outside of the EU.

All of our prices are inclusive of VAT.

Once a product has been returned to us, we will aim to repair or replace it within 30 days of receipt.

The guarantee does not cover any defect arising from improper use, damage, build-up of lime scale or repair attempts made by third-parties. Also, the guarantee does not cover normal wear and tear of individual parts.

Disposal of the appliance

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY!

Correct disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return




your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Electrical information

Please note:

It is extremely important that the wires or cores in the flex are connected to the correct terminals in the plug. If the colour of the mains lead of the appliance does not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

- The **Live (Brown)** wire connects to the right-most live (L) terminal nearest to the fuse.
- The **Neutral (Blue)** wire connects to the left-most neutral (N) terminal.
- The **Earth (Green and Yellow)** wire connects to the central, top most earthed (E) terminal.

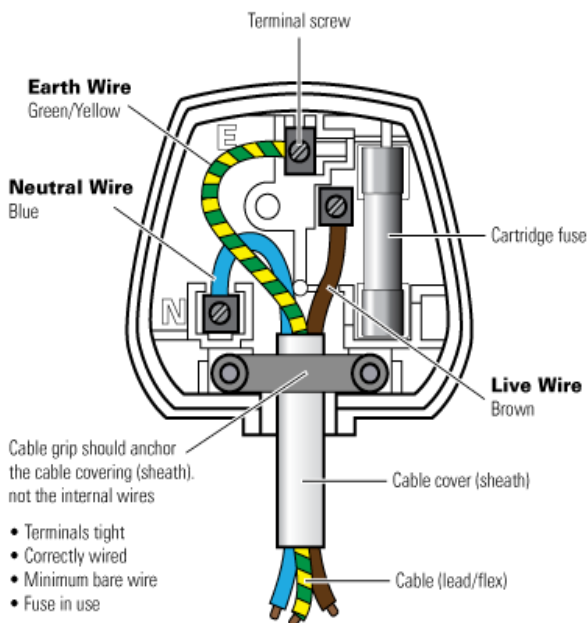

Warning:

If the appliance is double insulated indicated by the double insulated symbol:



it should not have an earth wire or earth connection.

Plug

The plug must be protected by the correct AMP fuse; this will be indicated on the case of the plug. Only BSI or ASTA approved fuses should be used. When changing the fuse always replace it with a fuse that is of the same identical rating as the original. If you are unsure about which plug or fuse to use, always refer to a qualified electrician. Please note after replacing the fuse, ensure that the cover is correctly fitted back onto the plug. Never attempt to run the appliance if the plug does not have a cover. If a moulded plug is fitted and has to be removed take great care in disposing of the plug and severed cable, it must be destroyed to prevent it from engaging into a socket. If the supply cord is damaged it must be replaced by a service agent or a similarly

Copyright Andrew James